


1. Parts & Accessories

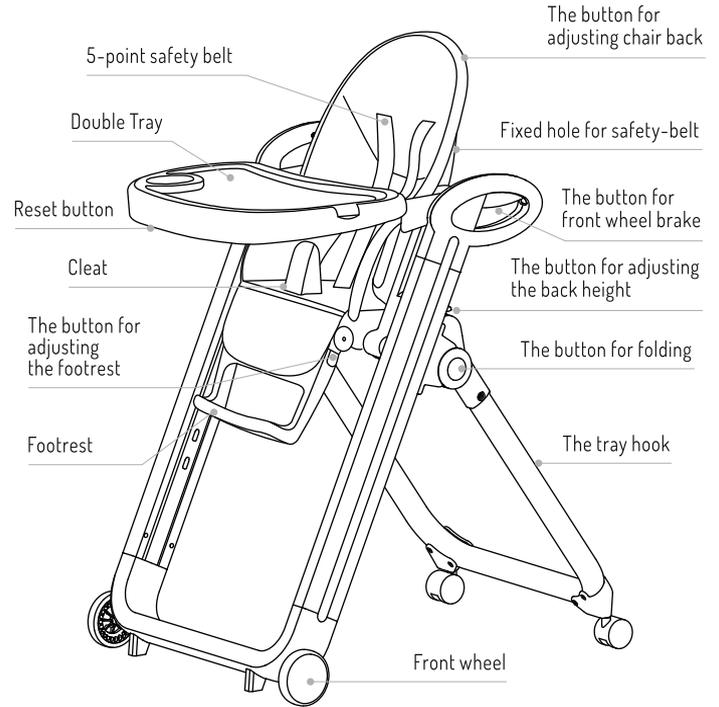 


Note - Please take a few minutes to read this manual. This will help you assemble and use the high chair suitably. Keep this manual for future reference


Before assembly, please double check all parts as shown are included in the package. For any missing or defective parts, or sharp edges, please contact customer service immediately. To guarantee the service life of the high chair, please use it correctly under the instructions and make it through inspection regularly. Never use it if any parts are missing or broken

Assembly Instructions

1. Chair

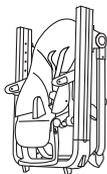

 2. Detachable Tray

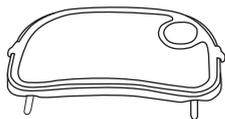

3. Front Wheels




4. Front Axle




5. Universal Wheels




6. Brake Handles

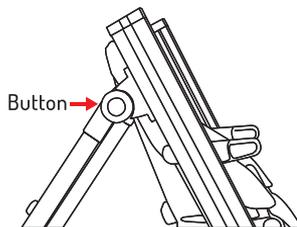


- Take the chair out from the box, lift the seat upward by holding the button
- Hold the two buttons of the leg tubes to open the chair completely, then loosen the button to ensure the chair sets well
- Conversely, hold the buttons to collapse the chair to lock

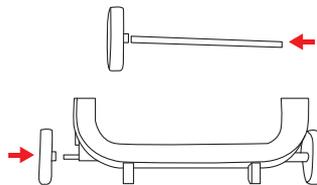


- **The first front wheel:** Pull the plug, take the axle out of the front right leg tubes, insert the axle into the front wheel until you hear a "click" sound, which means the wheel assembly is ready
- **The second front-wheel:** Put the axle with one wheel into its hole at the front, then assemble the other wheels until you hear a "click" sound, which means the wheel assembly is ready

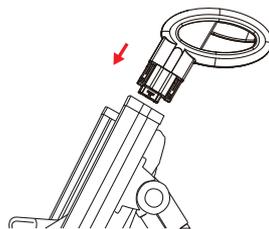


Insert the handles into the leg tubes as shown in the picture

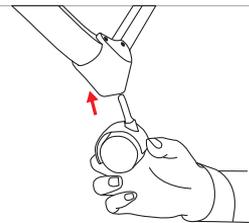


The universal wheels: Insert the wheel rod into the holes with reference to the image

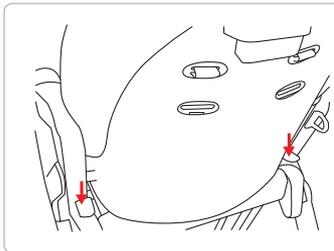


Press the seat height button to the low or high seat. Pull the seat and raise it, as the seat height can be adjusted to 7 positions

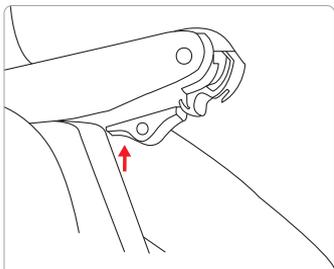


As shown in the image, reset the plate by pressing the reset button

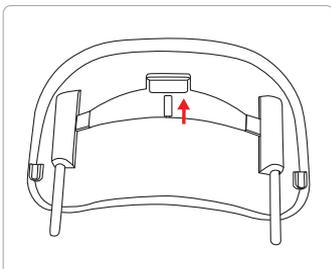


Pull the grip of the plate below and insert both tubes into the hole of the handles, then loosen the grip to the bottom

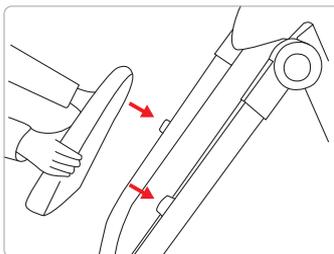


When not in use, the tray can be stored on the rear legs of the frame by using the rear leg slots as shown in the image

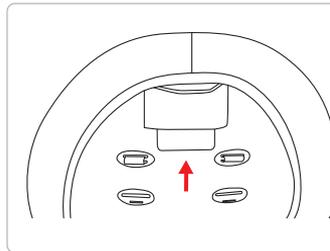


To adjust the backrest, hold the back bar and pull it forward or backward for the desired position. The backrest can be adjusted in 5 different positions

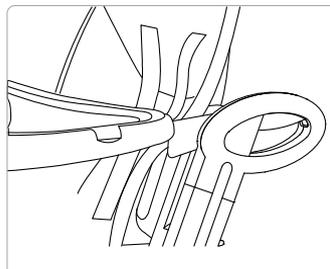

Press the red button to release the brake. Hold it forward to loosen the brake

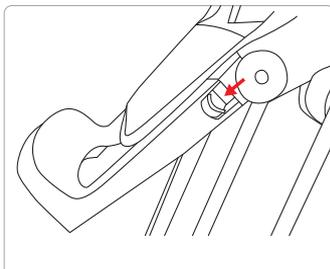

The footrest can be adjusted to 3 positions. Push the footrest upward directly and press the footrest button down to adjust as shown in the image

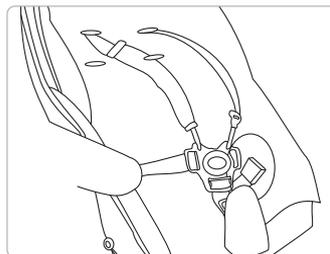

Thread the shoulder straps, waist belt and crotch strap through the corresponding openings. Make sure the shoulder straps are at the appropriate height position and the waist belt is pulled through the seat fabric



WARNING!

- Adult assembly required.
- Never leave the child unattended.
- Always keep the child in view while in the highchair.
- Always use restraints, and adjust to fit snugly.
- Stay close and watch the child during use.
- Secure your child at all times with the restraint system provided, both in the reclined and upright positions.
- The tray is not designed to hold your child in the chair.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Always lock the wheels when the child is sitting in the high chair, or when the highchair is open but not in use.
- Ensure placing the highchair on a horizontal, stable surface. Never place the highchair near stairs or steps. Do not move the chair with a child in it.
- The high chair is designed to accommodate one child at a time.
- Discard use if any part is broken, torn, or missing.
- Ensure that all components are correctly fitted and adjusted before and after each use.
- Do not place any heavy bags, packages, or other items on the highchair tray. They may cause the chair to tip over.
- This highchair is recommended for children who can sit upright unassisted OR do not weigh more than 15 kg and are not more than 36 months old.
- Do not place the chair near any heat source, electric bar, fires, gas fires, etc., or where a child could gain access to any other kind of hazard.

- Ensure all users are familiar with the product's operation. It should always open and fold easily. If it does not, do not force the mechanism, instead refer to the assembly instructions.
- All hazards such as electrical flex should be kept out of reach of the child in the high chair.

Wash Care Instructions

Maintenance

- Periodic maintenance is required to ensure the high is in good working order.
- Regularly check all parts of the product to ensure that they are operating correctly and for any signs of wear or damage.

Cleaning

- Never clean any part of the highchair with abrasive, ammonia-based, bleach-based or spirit-type cleansers.
- Ensure the product is completely dry after cleaning before use or storage.
- Make sure the highchair is stored in a dry place to prevent mold or mildew development.
- Frame Cleaning: Wipe with a damp cloth and wipe dry with a soft cloth.
- Harness Cleaning: Sponge clean with a mild soap and water solution. Rinse and wipe dry.