


1. Parts & Accessories

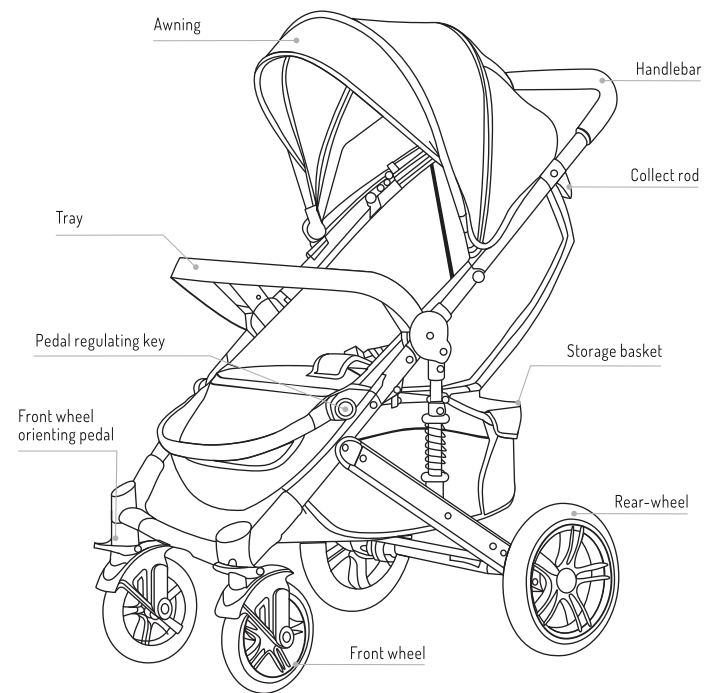

Note – Please take a few minutes to read this manual. This will help you assemble and use the car seat suitably. Keep this manual for future reference.

Before assembly, please double check all parts as shown are included in the package. For any missing or defective parts, or sharp edges, please contact customer service immediately. To guarantee the service life of the car seat, please use it correctly under the instructions and make it through inspection regularly. Never use it if any parts are missing or broken.

Assembly Instructions



Folding & Unfolding the Stroller

Unfold as shown in the picture. Make sure the stroller is fully opened and latched. Buckle the hood into the latch.



Front Wheel Assembly

Insert the leg unit into the wheel set and snap the fastener onto the legs. Make sure they are securely fixed.



Rear Wheel Assembly

Push both wheel mounts all the way, until they snap onto the legs. Make sure they are securely fixed.



To Alternate Between Swivel & Lock

Push buttons down to lock and pull up to release swivels.



Adjust the Footrest

Press the button on the side simultaneously of the footrest to move it up or down.



Food Tray

To attach the food tray, insert it into the cavity provided until you hear "click".



Adjust the Canopy

Pull forward to open the canopy, push backwards to close the canopy. To use the canopy extension: Pull the extension out from under the canopy until it snaps into place, push the extension under the main canopy to hide



Backrest Adjustment

Pull the strap, as shown in the picture, slightly up to adjust the backrest to the desired position.



To Use Rear Brakes

As shown in the picture, step down to park and lift up the release.




WARNING!

To avoid serious injury from falling or sliding out of the stroller, always use the 5-point safety harness. Snap buckle together.

- Adjust the belt to get a snug fit around the child.
- To Open Buckle
- Press in the middle of the buckle to release.

For your child's safety

- This product is suitable for one child at a time
- This product is suitable for children who cannot sit unaided, roll over and cannot push themselves up on their hands and knees
- Never leave the child unattended in the stroller
- Do not let other children play with the product
- Never use the stroller on stairs or escalators. Be careful while going up or down the slope
- Any load on the push bar and or at the back of the backrest of the stroller will affect the balance
- Do not place things more than 3kg in the storage basket
- Do not hang purse, shopping bag, parcel or accessories on the handle
- Wheels should be locked before placing and removing the children

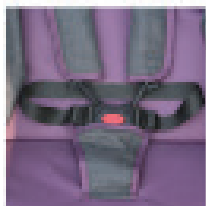

Adjusting the Seat Belt Attachment

To use the seat belt:

- Place the crotch belt between the baby's legs
- Insert both waist belt buckles into the middle plastic piece
- Attach each shoulder straps to the top of the waist belt clips
- To adjust the harness or waist belt, loosen the slack on both sides of each buckle



- Ensure all the locking devices are correctly engaged before use
- Sitting position is not suitable for children below 6 months
- Always use the safety harness
- Not advised to use on very rough terrains
- This stroller is not suitable for running and skating
- Make sure the children are at a safe distance while unfolding and folding the stroller
- Please check the stroller for any loose parts, damaged or broken parts before each use
- Replace at the first signs of damage

Cleaning and Maintenance

• Cloth Cleaning

1. It is recommended to use a damp cloth for dust and general stains
2. Use mild lotion
3. Seat cover and canopy cover are not machine washable
4. Leave the washed cloth cover in a ventilated place and dry it. Do not expose it to direct sunlight
5. Do not brush the cloth cover hard as it may cause damage to the fabric

• Frame Cleaning

1. Do not use a corrosive lotion to scrub the frame
2. Use a wet cloth and mild lotion to wash the frame