

**Note** – Please take a few minutes to read this manual. This will help you assemble and use the playpen suitably. Keep this manual for future reference.

Before assembly, please double-check all parts as shown are included in the package. To guarantee the service life of the playpen, please use it correctly as per the instructions and make thorough inspections regularly. Never use it if any parts are missing or broken.


## For Your Child's Health & Safety

- To prevent possible injury by entanglement, remove this toy when the child starts trying to get up on its hands and knees in a crawling position.
- Keep all small parts and packaging materials for this product away from babies and children.
- The product must be installed and used under the supervision of an adult.
- Please ensure that all parts are correctly installed.
- Check this playpen regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts.
- The product, including side rails, must be fully erected prior to use.
- Ensure that the sides of this playpen are properly latched or locked in the appropriate position before placing a child in it.
- Do not use this playpen for a child who can climb out of it or who is taller than 90 cm.
- When a child is able to pull to a standing position, set the mattress/ base to a lower adjustment position and remove bumper pads, large toys, and other objects that could serve as steps for climbing.
- Use only the mattress/ pad provided by the manufacturer.
- Ensure that all bassinet fabric lies flat against the playard frame and that the bassinet corners are secure with the hook-and-loop strips.
- Always check that the bassinet is securely locked on the frame by pulling upwards.
- Do not place any cord, strap, or similar item in or near this accessory that could become wrapped around a child's neck.

- Ensure that the play yard is fully erected before each use.
- Check that:
  - 1.The top rails are completely locked by pushing down on them
  - 2.The center of the floor is completely pushed down
  - 3.The mattress is lying flat and is secured with all hook-and-loop straps.
- Never use the play yard on uneven or unsafe surfaces.
- Never use near stoves, heaters, or other heat sources
- Do not change, tamper with or modify any part of this product.
- Never leave Changing Table in place when the child is in the playard.


## Assembly Instructions

### Step 1

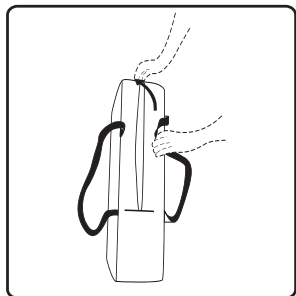


Take the playpen out from the carry bag.

### Step 2

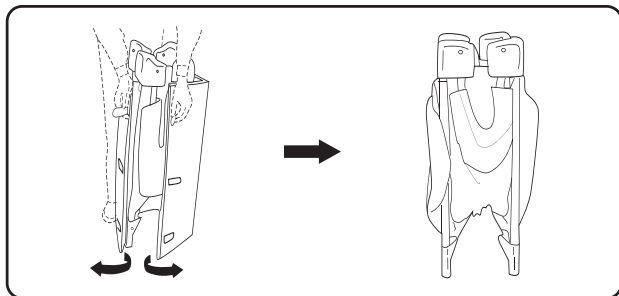


Release the mattress and open it.

### Step 3

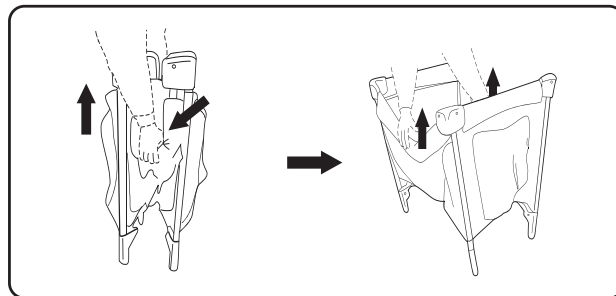

Open the sides until they are locked in position.

### Step 4

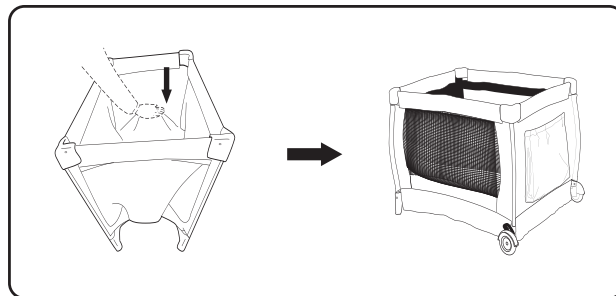

Push the floor center down until it is completely safe and stable.

### Step 5




Finally, put the mattress on the zipper second layer assembly.

### Wash Instructions

- Cleaning Instructions
- Use only mild soap and warm water.
- Do not use bleach.
- Do not machine wash.


## How to Fold

### Step 1

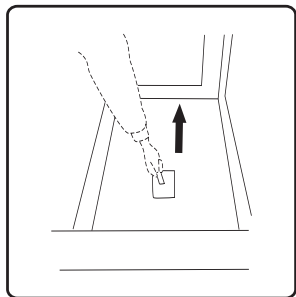


Take out the mattress and pull the center band up to higher as shown in the figure.

### Step 2

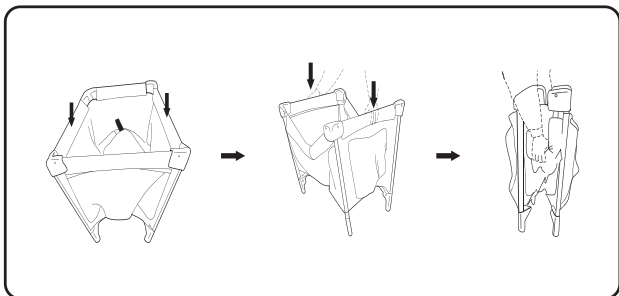


Release the button up on the center of the rails, and make it droop as "V", please pull the center band up more, if not completely droopy, then press again as shown in the figures. Secure the bulge fully up, and push four legs together.

### Step 3

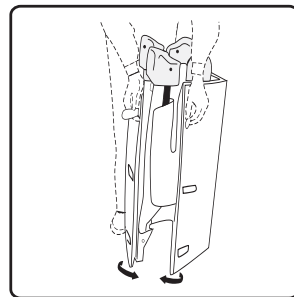

Wrap it in and clip tightly.

### Step 4

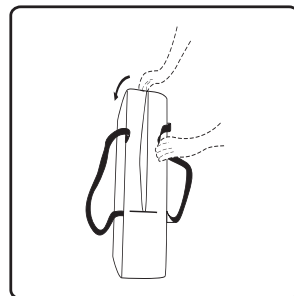

Put the whole wrap in the carry bag.

## Zipper Second Layer Instruction

### Step 1



Take out the zipper second layer.

### Step 2



Close the zipper around the whole playpen.

### Step 3



Put the velcro over the zipper to cover it.

### Step 4



Take out the two tubes, and push the ends of the steel supports into the textile tunnel. Then interlock the pairs of steel supports.